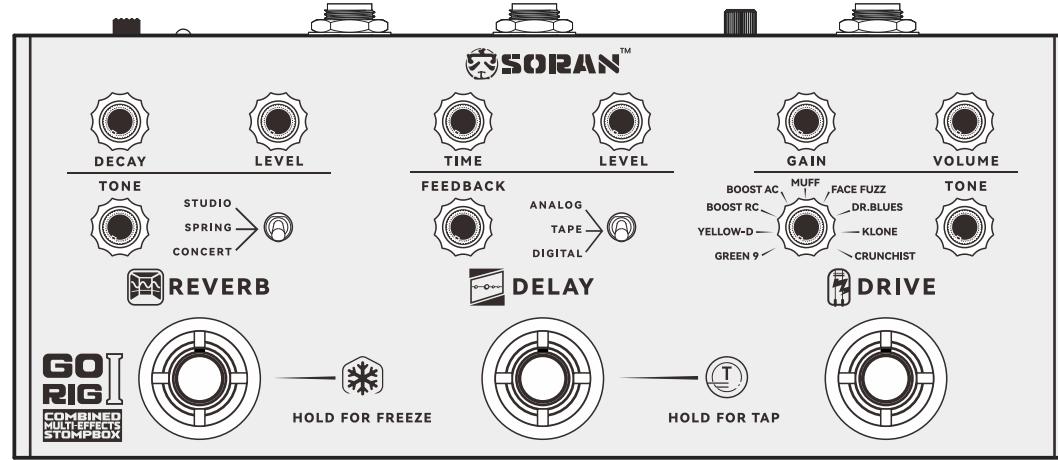


SORAN™**GO RIG I****Combined Multi-effects Stompbox**组合式效果器
Owner's Manual
用户手册**WARNING!**
IMPORTANT SAFETY INSTRUCTIONS**READ THESE INSTRUCTIONS BEFORE CONNECTING.
KEEP THEM FOR FUTURE REFERENCE.****WARNING:**

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

CAUTION:

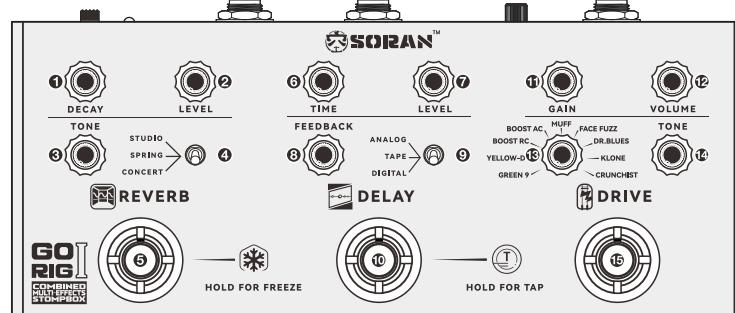
To reduce the risk of fire or electric shock, do not remove screws or covers. No user-serviceable parts inside. Refer servicing to qualified service personnel only.

FCC COMPLIANCE STATEMENT:

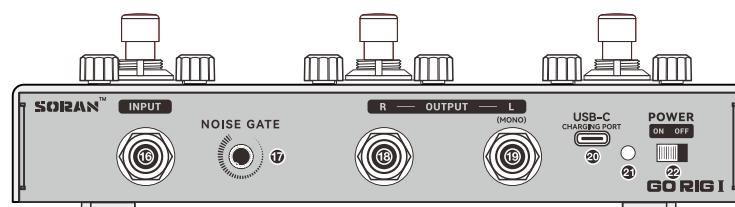
This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1.This device may not cause harmful interference. 2.This device must accept any interference received, including interference that may cause undesired operation.

SYMBOL DEFINITIONS:**Lightning Bolt Symbol:** Indicates the presence of high voltage. Handling this device improperly may cause electrical shock.**Exclamation Point Symbol:** Alerts the user to important operating and maintenance instructions.**SAFETY INSTRUCTIONS:**

- Power Supply:** Use only the provided power supply or power cord. If unsure about the power type available, consult your dealer or local power company.
- Placement & Heat Sources:** Do not place the device near heat sources such as radiators, heat registers, or other devices that generate heat.
- Object & Liquid Entry:** Prevent objects or liquids from entering the enclosure to avoid damage or electrical shock.
- Servicing:** Do not attempt to repair or modify this product yourself. Opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- Conditions Requiring Service:** Servicing is required if:
 - The power cord or plug is damaged.
 - Liquid has been spilled or objects have fallen into the device.
 - The device has been exposed to rain or moisture.
 - The device does not operate normally.
 - The device has been dropped or damaged in any way.
- Unplugging:** Disconnect the power supply if the device will be unused for long periods of time.
- Power Cord Protection:** Ensure the power cord is not stepped on, pinched, or damaged, particularly at plugs, convenience receptacles, and where it exits from the device.
- Hearing Protection:** Listening at high volume levels for prolonged periods may cause permanent hearing loss. Always practice safe listening.

NOTICE: Follow all instructions and heed all warnings.**KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.****CONTROL PANEL**

① Decay	Sets the reverb decay time.	⑥ Time	Adjusts the time of the delay. (20~1000ms)
② Level	Adjusts the level of the reverb.	⑦ Level	Adjusts the volume of the delay repeats.
③ Tone	Adjusts the brightness of the reverb.	⑧ Feedback	Adjusts the number of delay repeats.
④ Reverb Type Selector	Selects reverb type included Studio, Spring, or Concert.	⑨ Delay Type Selector	Selects delay type included Analog, Tape, or Digital.
⑤ Footswitch	Turns the reverb effect on or off. The LED lights white when Reverb is ON. Press and hold to activate the Reverb Freeze function—the LED turns red. Release to exit Freeze mode.	⑩ Footswitch	Turns the delay effect on or off. Lights white when the Delay effect is on. Press and hold for 1.5 seconds to enter Tap Tempo mode. Lights turn red. Exits Tap Tempo mode automatically after 3 seconds of inactivity.
⑪ Gain	Sets the amount of drive effect.	⑫ Tone	Adjusts the brightness of the drive effect.
⑬ Volume	Adjusts the output volume of the drive effect.	⑭ Footswitch	Turns the drive effect on or off. Lights white when the Drive effect is on.
⑮ Drive Type Selector	Selects from 9 drive types including GREEN 9, YELLOW-D, BOOST RC, BOOST AC, MUFF, FACE FUZZ, DR.BLUES, KLONE and CRUNCHIST.		

**OVERVIEW**

The Go Rig I is a compact digital multi-effects stompbox that combines essential guitar effects—NOISE GATE, DRIVE, DELAY, and REVERB—in one streamlined unit. Designed for guitarists who value simplicity, portability, and high-quality tones, Go Rig I delivers everything you need for rehearsals, performances, and daily practice sessions.

The Drive module features 9 iconic overdrive, distortion, and fuzz tones inspired by legendary pedals: Green 9, Yellow-D, Boost RC, Boost AC, Muff, Face Fuzz, Dr. Blues, Klon, and Crunchist—covering the full range of classic and modern lead tones.

The Delay module includes 3 essential delay types: Analog Delay, Tape Echo, and Digital Delay. It also supports Tap Tempo, allowing players to quickly and easily adjust delay time to match the tempo of their music.

The Reverb module offers 3 studio-grade reverbs: Studio Reverb, Spring Reverb, and Concert Reverb. In addition, the module features a Freeze function for ambient soundscapes and creative reverb effects.

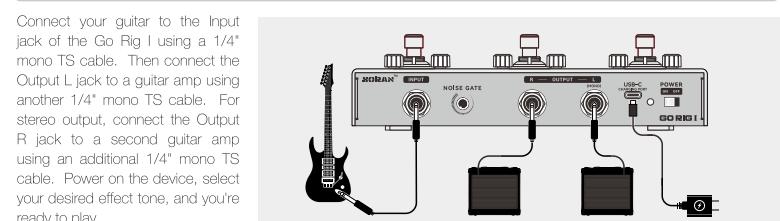
A built-in Noise Gate helps suppress unwanted noise, especially when using high-gain distortion settings. Go Rig I supports stereo output, and with its built-in lithium battery, you can play anywhere—no external power required. The battery provides over 5 hours of continuous playtime on a single charge, and the USB-C port ensures convenient and fast recharging. Housed in a durable full-metal enclosure, Go Rig I is built to withstand the demands of stage and studio use. With an intuitive, “what you see is what you get” interface, users can get started in seconds.

Just plug in your guitar, connect to an amp, and you're ready to go. From home practice to gigging on the road, Go Rig I fits in your gig bag and powers your sound anytime, anywhere.

FEATURES

- Combines DRIVE, DELAY, and REVERB in a compact, portable multi-effects stompbox ideal for practice and gigs.
- Includes 9 legendary drive tones such as Green 9, Yellow-D, Boost RC, Muff, Face Fuzz, Klon, and more.
- Features 3 delay types with Tap Tempo for quick tempo-synced delay adjustments.
- Offers 3 reverb types plus Freeze function for ambient and layered effects.
- Built-in noise gate reduces unwanted noise during high-gain use.
- Supports stereo output for wide, immersive sound.
- Equipped with built-in lithium battery providing over 5 hours playtime and fast USB-C charging.
- Rugged full-metal housing designed for durability on stage and in the studio.
- Intuitive, menu-free interface for immediate, easy operation.
- Portable design fits easily into gig bags for on-the-go playing.

⑯ Input	1/4" TS mono jack for connecting your guitar or other pedals.	㉑ USB-C	USB Type-C jack for charging the built-in battery, DC 5V.
㉒ Noise Gate	Adjusts the noise gate threshold. Turning the knob fully counter-clockwise disables the noise gate.	㉓ Power LED	Indicates the current battery status.
㉔ Output R	1/4" TS mono jack for connecting to amplifiers or other pedals, outputting the right channel in a stereo setup.	Status	LED
㉕ Output L	1/4" TS mono jack for connecting to amplifiers or other pedals, outputting the left channel in a mono or stereo setup.	Power on	Battery > 25% Green
		Power on	Battery < 25% Flashing green
		Charging	Battery < 100% Red
		Charging	Battery full Green
㉖ Power	TURNS THE UNIT ON/OFF.	㉗ Power	TURNS THE UNIT ON/OFF.

CONNECTION

When the battery is low (indicated by the power LED flashing green), use a USB-C to USB-A cable to connect the Go Rig I to a USB power adapter. Once fully charged, the LED will turn green.

SPECIFICATIONS

Sampling Frequency	: 44.1kHz	Input Impedance	: 1MΩ
AD converter	: 24bit	Output	: 1/4" TS Output L, 1/4" TS Output R
Signal Processing	: 24bit	Output Impedance	: 10kΩ
Frequency response	: 20Hz-20kHz	Power	: Built-in 500mAh Li-ion battery, DC 5V USB charging via USB-C
Noise Level	: -98.7dBu	Dimensions	: 200mm(L) x 86mm(W) x 54mm(H)
Dynamic Range	: 96.5dB	Weight	: 535g
Power Consumption	: 85mA		
Input	: 1/4" TS Input		

ACCESSORIES

- User manual
- USB-C to USB-A Cable

*Specification may change without notice.



Made in China